PRODUCT SPECIFICATIONS

Product name	LiFePo4 Battery	
Model	IFR26650-3000mAh-3.2V	
Manufacturer	Shandong Goldencell Electronics Technology Co.,Lt	td
Brand	Atakale	

+90 312 425 2200 www.atakale.com

Contents

Application Scope	. 3
Aodel	. 3
Dimensions	3
Major Technical Parameters	. 4
Characteristics Curves	5
Safety Characteristics	7
Environmental Adaptability	8
Standard Test Environment	9
Storage and Others	. 9
Notice in Using Battery	9
Accountability for the content	


Application Scope

This product specification describes product performance indicators of LiFePo4 battery produced by Shandong Goldencell Electronics Technology Co.,Ltd

Model

HTCFR26650-3000mAh-3.2V


Dimensions

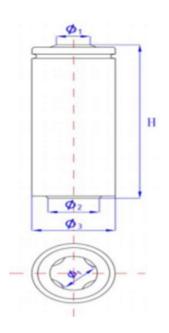


Item	Dimension (mm)
Н	65.6±0.3
Ф1	12.2±0.2
Ф2	18±0.2
ФЗ	26.15±0.1


Major Technical Parameters


No.	ltem		Standard	Note
1	Standard Capacity		3000mAh	0.5C, (current value of 3000mA at 1C)
2	Capacity R	lange	3300~3500mAh	0.5C
3	Standard \	/oltage	3.2V	
4	Alternating Internal Resistance		e ≤ 15mΩ	
	Charge Conditions	Cut-off Voltage	3.65±0.05∨	Constant-current charge to 3.65V at 0.5C, constant
		Cut-off Current	0.01C	voltage charge to stop until 0.01C mA
6	Max. Charging Current		9A	
7	Discharge Cut-off Voltage		2.5V	
8	Standard Discharge Current		6A	
9	Fast Discharge Current		15A	
10	Max. Continuous Discharge Current		30A	
11	Pulse Discharge Current		45A, 5s	
			1500 times (100% DOD) 3000 times	The residual capacity is no less than 80% of rated
12	Cycle Characteristic		(80% DOD)	capacity at 1C rate, 3C
			5000 times (50% DOD)	Discharge rate.
13	Working Temperature		Charge: 0°C~55°C Discharge: -20°C~60°C	
14	Storage Temperature		-20°C ~ 45°C	Short-term storage (< 3 months)
15	Battery Weight		85g (Approx.)	

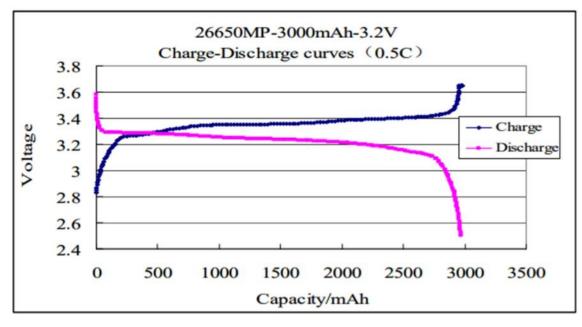

Characteristics Curves

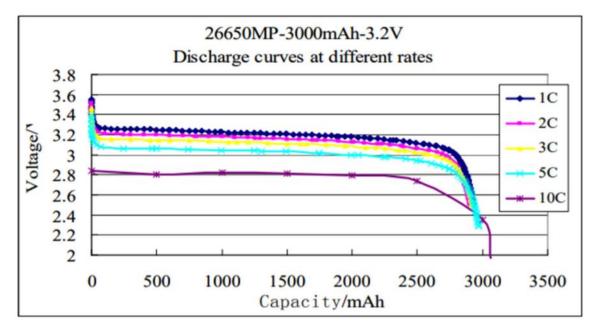

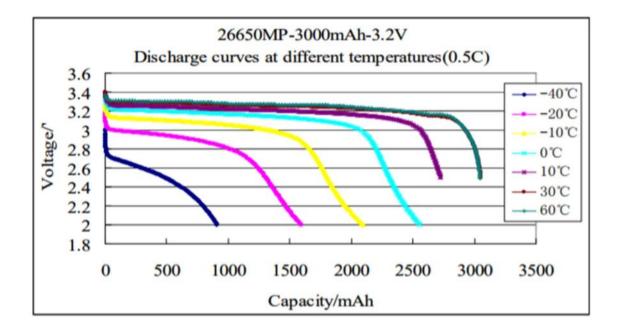

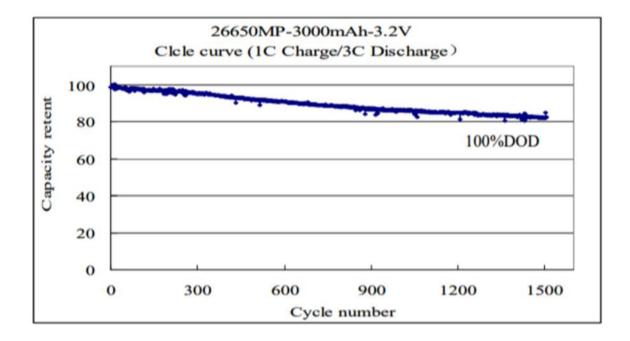

Safety	Characteristics

No.	ltem	Test Method	Standard	
1	Overcharge	After normal charge, test the batteries' initial state ar capacity. Charge to 10.0V at 3C, then charge at CV mode to 0.01C. Observe battery's variation of	•	
		appearance		
2	Over Discharge	After normal charge, test the batteries' initial state. When the batteries are normal, Discharge to 0V at 0.5C. Observe battery's variation of appearance	No explosion, No fire.	
3	External Short-circuit	After normal charge, test the batteries initial state, Keep the battery into explosion protection cover, short-circuit the positive and negative terminals directly (general resistance shall be less than or equal to $50m\Omega$). Stop the test when the temperature falls to $10^{\circ}C$ lower than the peak value. Observe the variation of the batteries' appearance and temperature		
4	Thermal Abuse	Test the batteries' initial state and capacity. Standard No explo charge. Put battery into oven, increase the No fire. temperature to $130\pm2^{\circ}$ C at rate of $(5\pm2^{\circ}C)/min$, and keep it for 30min. Observe the variation of batteries' appearance.		
5	Drop	After normal charge, test the batteries' initial state and explosion capacity. Then let it fall from a height of 1m (the lowest of fire. height) to a smooth cement floor, twice		
6	Heavy Impact	A diameter of 15.8 mm steel rod is placed in the mid dle explosion of the fully charged battery, then the weight of 10Kg No fire. hammer from 1.0m height free falls to the battery upper.		
7	Extrusion Test	Place the battery in between the pressing surface of No explosion, extrusion apparatus, parallel the axes of cylindrical No fire. battery to the pressing surface, and gradually increase pressure up to 13KN, keeping the pressure for 1min.		
8	Prick test	Use Φ 3 mm to 5 mm high temperature resistant stee needle, to 10 mm/s ~ 40 mm/s of speed, from the perpendicular to the direction of the battery plate (Steel needle stops in the battery).	No explosion, No fire.	

Environmental Adaptability

No.	ltem	Test Method	Standard
1	Temperature Cycle	Store the battery for 48 hours at 75±2 after standard °C charge, then store the battery at -20 6 hours, and °C at room temperature for 24 hours Observe the batteries' appearance.	· · ·
2	Static Humidity	Put the battery at 40°C±5°C and 95%RH chambe 48h, then get it out and store it for 2h at room temperature. Observe the appearance and discharge at 0.5C to 2.5V, then test the final capacity	Poischarge capacity after storage is more than 90% of rated capacity. No obvious outside damage, No corrosion, No smoke, No explosion
3	Vibration	Standard charge. Equip it to the vibration platform prepare the test equipment according to following vibration frequency and relevant swing, doing frequency sweeping from X, Y, Z three directions each from 10Hz to 55Hz for 30 minutes of recyclin rating of which is 1oct/min: A) vibration frequency: 10Hz ~ 30Hz Displacement breadth (single swing): 0.38mm B) vibration frequency: 30Hz ~ 55Hz Displacement breadth (single swing): 0.19mm. Observe the final state after scanning.	i,Residual Capacity ≥ 90% Rated Capacity Voltage Decrease Rate ≤ 0.5% No obvious outside nglamage, No leakage, No smoke, No
4	Normal Storage	Test the batteries' initial state and capacity; store the battery for 30 days after standard charge, test the final state. Discharge at 0.5C to 2.5V, then test batteries' residual capacity. Then after normal charge, discharge at 0.5C to 2.5V, then test the batteries' recovery capacity, Three cycles are permitted for this test, If one of the three cycles ca reach the standard, it represents the battery has reached the standard.	t Initial Capacity tRecuperative Capacity ≥95% Initial Internal.

Standard Test Environment

Unless especially specified, all tests stated in this Product Specification are conducted at below condition: Temperature: 25±2°C Humidity: (65±20) % RH

Storage and Others

- Long Time Storage: If the battery is stored for a long time (more than three months), the battery should be stored in a dry and cool place. The battery should be charged and discharged every three months. The batteries' storage voltage should be 3.3~3.4V and the battery should be stored in a condition as NO.8.
- 2. Others: Any matters that this specification does not cover should be consulted between the customer and Goldencell.

Notice in Using Battery

Please pay attention to followings in case of battery will have leakage, heat etc.

- Do not immerse the battery in water or seawater, and keep the battery in a cool dry surrounding if it stands by.
- Do not use or leave the battery at high temperature as fire or heater.
 Otherwise, it can overheat or fire or its performance will be degenerate and its service life will be decreased.
- Do not reverse the position and negative terminals.
- · Do not connect the battery electrodes to an electrical outlet.
- Do not short circuit. Otherwise it will cause serious damage to the battery.
- Do not transport or store the battery together with metal objects such as hairpins, necklaces, etc.
- Do not strike, trample, throw, drop and shock the battery.

Do not directly solder the battery and pierce the battery with a nail or other

sharp objects.

- Do not use the battery in a location where static electricity and magnetic field is great, otherwise, the safety devices may be damaged, causing hidden trouble of safety.
- · Use the battery charger specifically when recharging.
- If the battery leaks and the electrolyte gets into the eyes, do not rub the eyes, instead, rinse the eyes with clean water, and immediately seek medical attention. Otherwise, it may injure eyes.
- If the battery gives off strange odor, generates heat, becomes discolored or deformed, or in any way appears abnormal during use, recharging or storage, immediately stop charging, using, and remove it from the device.
- In case the battery terminals are dirty, clean the terminals with a dry cloth before use. Otherwise poor performance may occur due to the poor connection with the instrument.
- Tape the discarded battery terminals to insulate them.

Note

The following is the interpretation of some terms in the above test project: (1) Standard charge: Under the environment of 25°C±2°C, for constant current battery charging 0.5 C to cutoff voltage, to a constant voltage charging to the cut-off current, stop charging. (2) Initial state: Initial state of voltage and internal resistance of the battery. (3) Final state: State of battery internal resistance and voltage. (4) Residual Capacity: The first discharge capacity batteries after a specific test. (5) Recovery Capacity: The discharge capacity by specifically charge-discharge cycle repeatedly after being tested by the specific procedure.